


Installation Instructions

3000 Series

Construct a 2" x 4" frame as per below making sure that the frame is level. Install the 3000 unit letting the bottom of the unit sit on the cross member. Level the frame in both horizontal and vertical directions. Screw wood screws into top right and left holes. Open and close the door checking the door is level. Finish installing the screws.

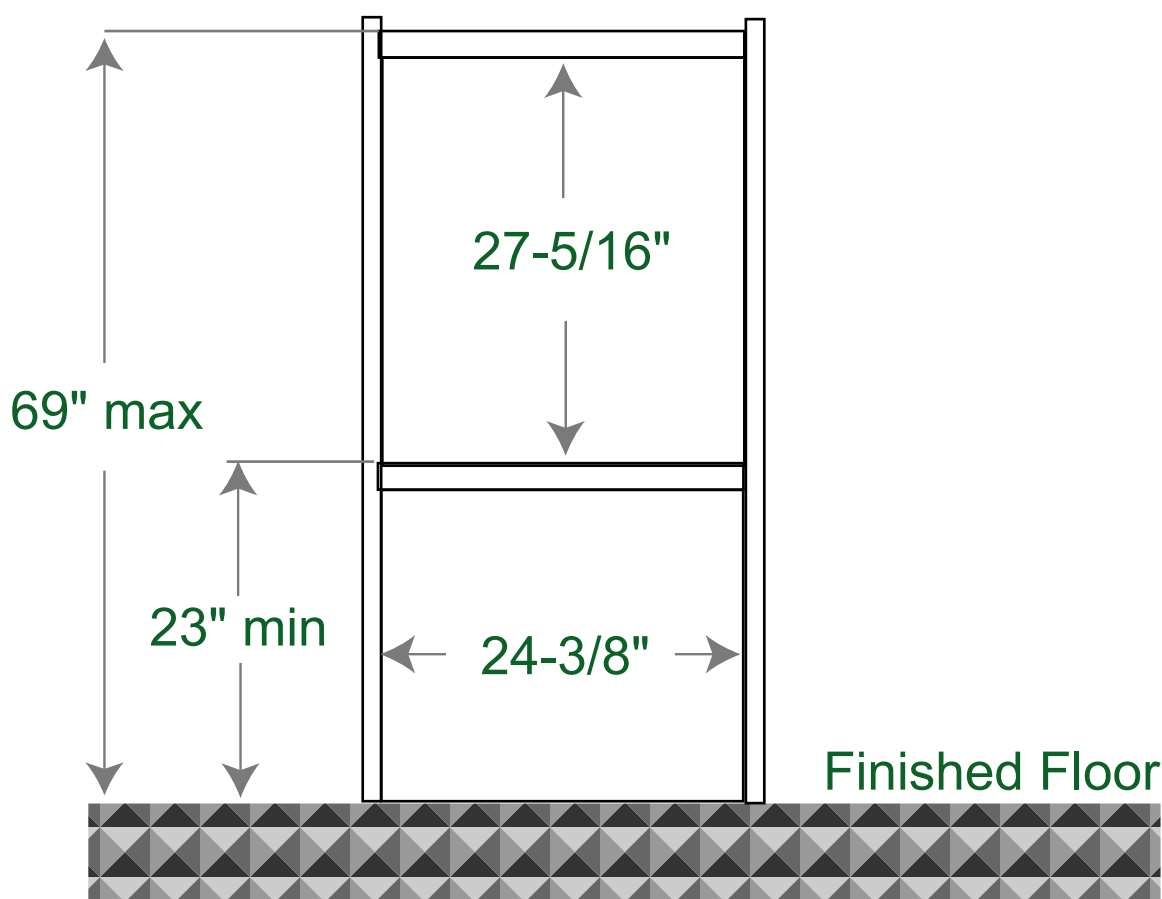

3000 Series

CANADIAN
LOCKER COMPANY LIMITED

931 Progress Avenue, Unit #5
Scarborough, Ont., Canada M1G 3V5
(800) 494-9073 or (416) 439-5992
www.canadianlocker.com