


Installation Instructions: 6000 Series

INSTALLATION

Caution: Be sure frames are installed completely square.

a. Receptacles and voluntary parcel lockers in apartment houses should be located at points reasonably near the entrance in vestibules, halls, or lobbies. The carriers must be able to serve the boxes without interference from swinging or opening doors. The area must be adequately lighted so as to afford the best protection to the mail and enable carriers to read addresses on mail and names on boxes without undue strain on their eyes.

b. Installation of standard, approved apartment receptacles in exterior walls of buildings may be authorized provided they are not installed directly on the street or public sidewalk. Wherever possible at least 15 feet should be kept between the boxes and the street or sidewalk, and the location should be clearly visible from one or more apartment windows. A canopy must be provided, designed and locate to afford maximum protection from the weather including driving rains. In addition, adequate night lighting must be installed.

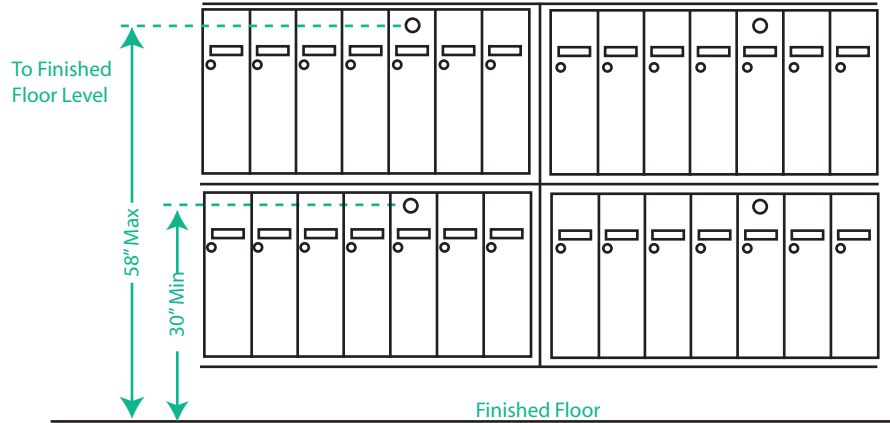


c. In vertical type installations:

(1) Receptacles must be placed so that the center of the barrel of the master lock of the upper tier will be no more than 58" from the floor. The center of the barrel of the master lock of the lower tier of letter boxes will be no less than 30" from the floor.


(2) No more than two tiers may be installed. Boxes must be arranged in groups. The maximum number of boxes in each group, installed under one Arrow Lock, is seven. Where the number of apartments is less than seven or where telephone units are installed with the boxes, less than seven may be grouped, but never less than three.

SURFACE MOUNTED INSTALLATION: Surface box may also be used as semi-recessed box

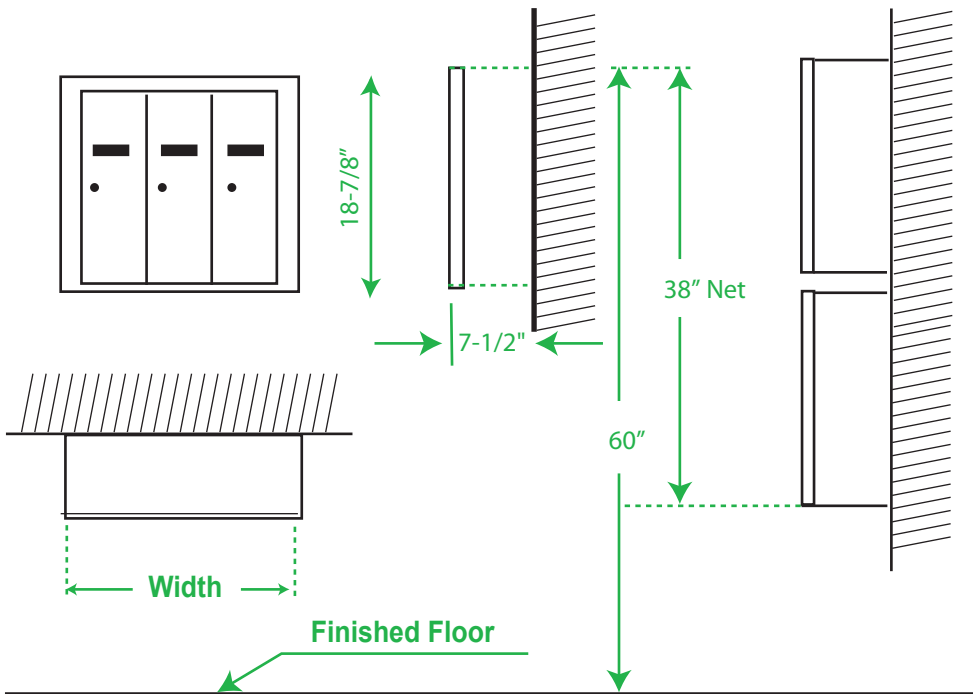


# of Doors	Over all Width
3	18-3/4
4	24-1/2
5	29-3/4
6	35-1/4
7	40-3/4
All modules are	
18-7/8" H Overall	
7-1/2" D Overall	
Each Box Compartments	
5-1/2" W	
16" Tall	
7" Deep	

1. Mount Assembly to wall with #10 x 1-1/2" Mounting Screws
2. Insert compartment

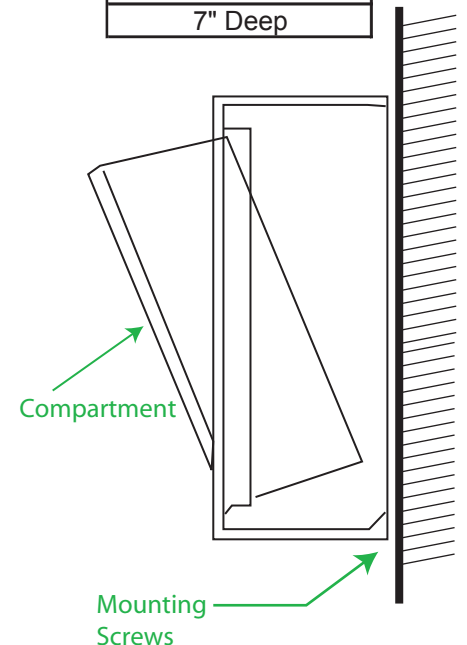

Installation Instructions: 6000 Series

RECESSED MOUNTED INSTALLATION:

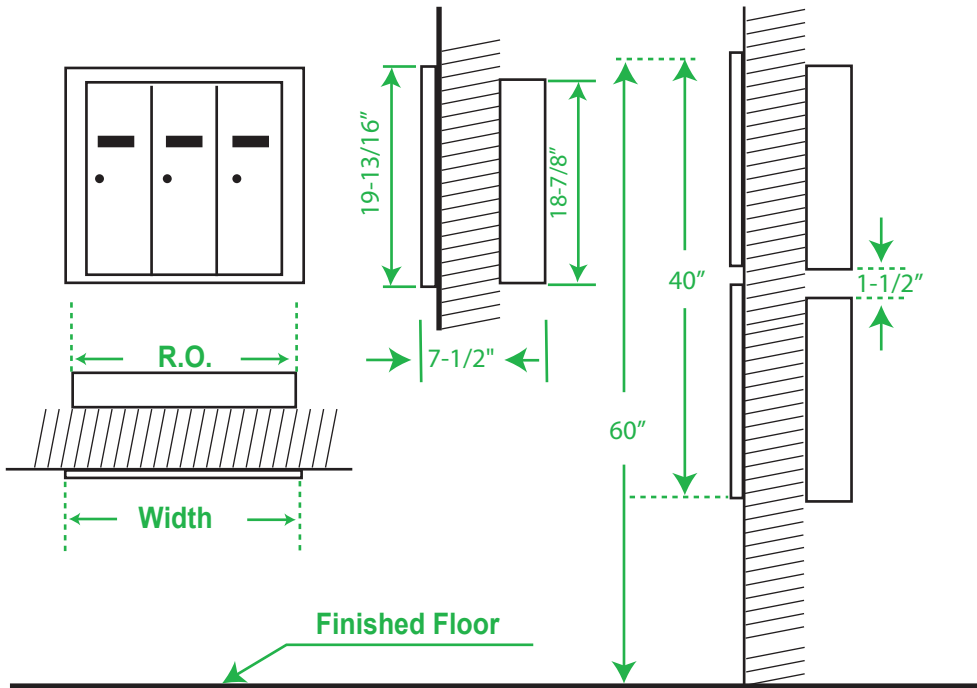

# of Doors	Rough Opening Width	Overall Width
3	18-5/8	19-3/4
4	24-1/8	25-1/2
5	29-5/8	30-3/4
6	35-1/8	36-1/4
7	40-5/8	41-3/4
All modules are		
19-13/16" H Overall		
7-3/8" D Overall		
Each Box Compartments		
5-1/2" W		
16" Tall		
7" Deep		

1. Mount Body to wall studs through bottom or sides with #10 x 1-1/2" mounting screws.
2. Insert load door.